



Moisture
Management
for Masonry

Your reputation. Your legacy. Our mission.



Installation Instructions/Packing Slip

Contents: 198 CellVent

Installation Instructions

1. Insert a CellVent at a maximum of 24" on center in open head joints with corrugated openings facing the exterior of the wall.
2. Place CellVent directly on flashing membrane.
3. Place CellVent in an open head joint at the flashing level.
4. Installation only by experienced masons, waterproofers or general contractors in properly specified weep hole systems.

Sizes and Packaging


THICKNESS	HEIGHT	LENGTH	UNITS/BOX
0.375"	2.5"	3.375"	200
0.375"	3.5"	3.375"	200



CellVent™ are fabricated from durable polypropylene and are UV stabilized for long life. They are available in 7 colors to complement most wall designs.

COLORS AVAILABLE

Seven colors available: clear, cocoa, brown, tan, black, gray, & white.

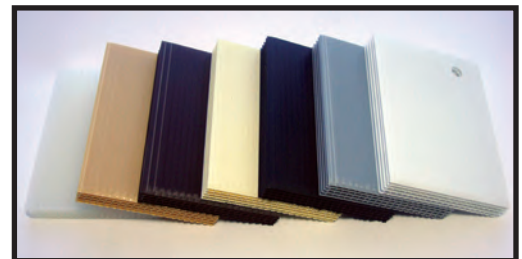

CellVent™ by Mortar Net™

Colors available:(left to right)
clear, cocoa, brown, tan, black, gray,
white

For Technical Support or if you have any questions regarding this product, please call 1-800-664-6638 or visit our website at www.mortarnet.com